

DIP Switch Settings for Fantasy 5

```
DIP BANK 1
                          2
                                3
                                                     7
                                                           8
                                          5
                                                6
 Denomination 1c
                   OFF
                         ON
                              OFF
               5c
                    ON
                         ON
                               ON
              10c
                   OFF
                         ON
                               ON
              25c
                    ON
                         OFF
                               ON
              50c
                   OFF
                         OFF
                               ON
               $1
                         ON
                              OFF
                    ON
 Mech in Ratio
               1
                                    ON
                                          ON
                                               ON
credits per pulse 2
                                    OFF
                                          ON
                                               ON
                                    ON
                                         OFF
                                               ON
(pin 18 parts side) 5
                                    OFF
                                         OFF
                                               ON
                                    ON
                                               OFF
               8
                                          ON
               10
                                    OFF
                                          ON
                                               OFF
               25
                                    ON
                                         OFF
                                               OFF
               50
                                    OFF
                                         OFF
                                              OFF
```

Note on DIP Switch Bank 1: switches 7 and 8, not used DIP Switch Bank 2: not used





Wire Function for 36 and 10 Dual-Position Card Edges

PARTS SIDE (numbers)		SOLDER SIDE (letters)	PARTS SIDE (numbers)		SOLDER SIDE (letters)
Video Red Video Blue Speaker + Ticket Feed Sw.	1 2 3 4 5 6 7	Video Green Video Sync GND	GND GND +5V +5V +12V +12V Ticket Disp. GND	1 2 3 4 5 6 7	GND GND +5V +5V +12V +12V
Ticket Notch Input Start Button Small Button	8 9 10		GND GND	8 9 10	GND GND
Play Credit Button Take Button Double Button	11 12 13 14 15				
Big Button	16 17				
Coin In	18 19				
Accounting Switch	20 21 22	Confirm Switch Clear Switch			
Coin In Meter Points Played Meter	23 24				
Points Won Meter	25 26				
Coin Out Meter Start Lamp Small Lamp Play Credit Lamp Take Lamp Double Lamp Big Lamp	27 28 29 30 31 32 33 34 35				
GND	36	GND			

